



## TP-N-851

### VIVE Comfort

1111 S. Glenstone Ave., Suite 2-100  
Springfield, MO 65804

Toll-Free: 1-800-776-1635 Web: [www.vivecomfort.com](http://www.vivecomfort.com)  
Hours of Operation: M-F 9AM - 6PM Eastern

Table of Contents	Page
Thermostat Quick Reference	2
Thermostat Operation	3
Thermostat Options	4
Warranty Registration	5




#### Caution:

#### Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor


Una versión en español de este manual se puede descargar en la página web de la compañía.

## Getting to know your thermostat

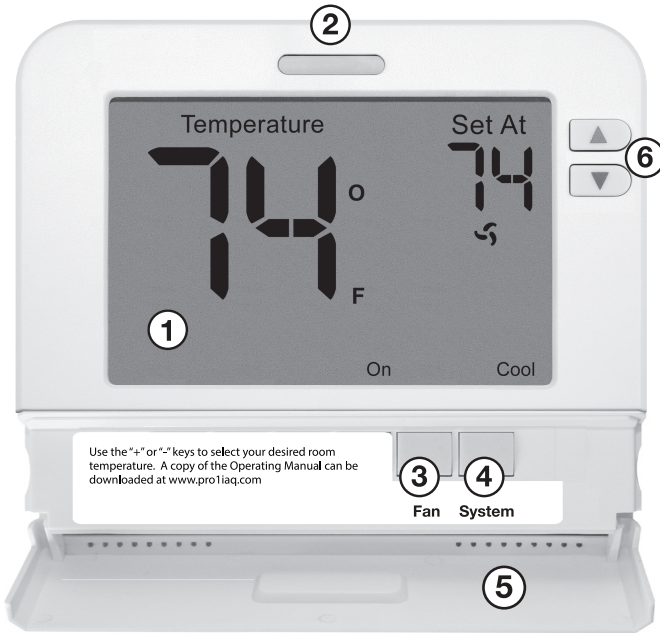

- ① LCD Display
- ② Glow in the Dark Light Button
- ③ Fan Switch
- ④ System Switch
- ⑤ Menu Button Access Door
- ⑥ Temperature Setpoint Buttons

Indicates the current room temperature.

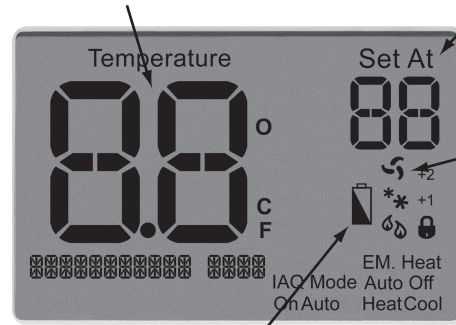

Displays the user selectable setpoint temperature.

**System operation indicators:** The **COOL**, **HEAT** or **FAN** icon will display when the **COOL**, **HEAT** or **FAN** is on.

**NOTE:** The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.

**Low Battery Indicator:** Replace batteries when indicator is shown.



### Important:

The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the thermostat display will only show the low battery indicator as a final warning before the thermostat becomes inoperable. The batteries are located on the back of the Thermostat.


## Battery Information

On the back of the thermostat insert 2 AA Alkaline batteries (included).

Pull the thermostat directly away from the wall to access the batteries. A firm tug will be required to remove the thermostat from the subbase mounted on the wall.



## Easy to use controls

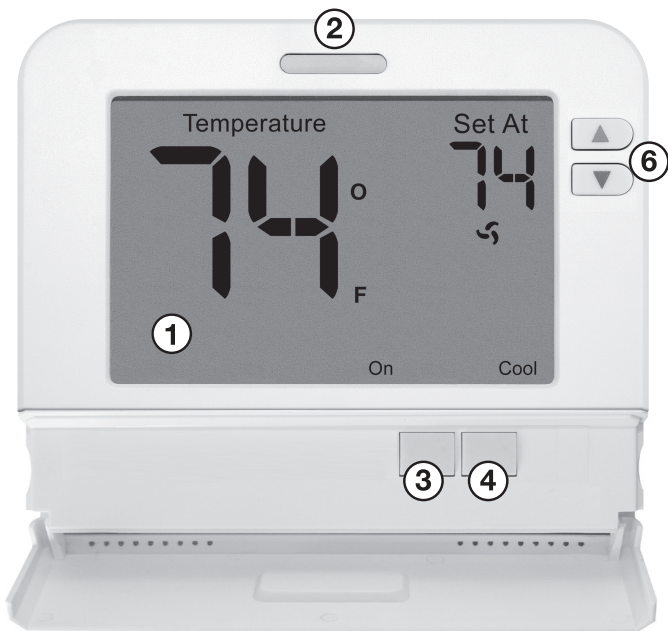

### ① LCD Display:

See page 2 for details about this display readout and icons.

### ② Glow in the Dark Light Button:


The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

### ③ Fan Key:

Select **ON** or **AUTO**. The **ON** key will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.



### Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating and cooling system becoming inoperable.


 
### A Note About Auto Changeover:

If in Auto you have the ability to switch between Auto Heat or Auto Cool by pressing the System key. This can be done once the current mode has reached its set-point. For example: if in Auto Heat, the heat setpoint must be satisfied before the thermostat will allow you to switch to Auto Cool. You can switch out the Auto by holding down the System key. To get back into Auto, you must toggle the System key to Auto.

### ④ System Key:

Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off. Selecting **AUTO** will turn the heating or cooling on as needed. (**EM HEAT** will appear as an option if operating a heat pump. **EM HEAT** setting will turn on Emergency Heat).

### ⑤ Temperature Setpoint Buttons:

Press the  or  buttons to select the desired room temperature.

## Filter Change Reminder


If your installation contractor has configured the thermostat to remind you when the air filter needs changed, you will see **FILT** in the display when your air filter needs changed. **FILT** will be shown in the display after your system has run long enough to require an air filter change.


### Resetting the filter change reminder:

When **FILT** reminder is displayed, you should change your air filter and reset the reminder by holding down the **FAN** button for 3



### Keypad Lockout Note:

If  appears in display then the keypad is locked. All or some the keys will not work. Hold the **FAN** and **SYSTEM** keys for 3 seconds to remove the lock.

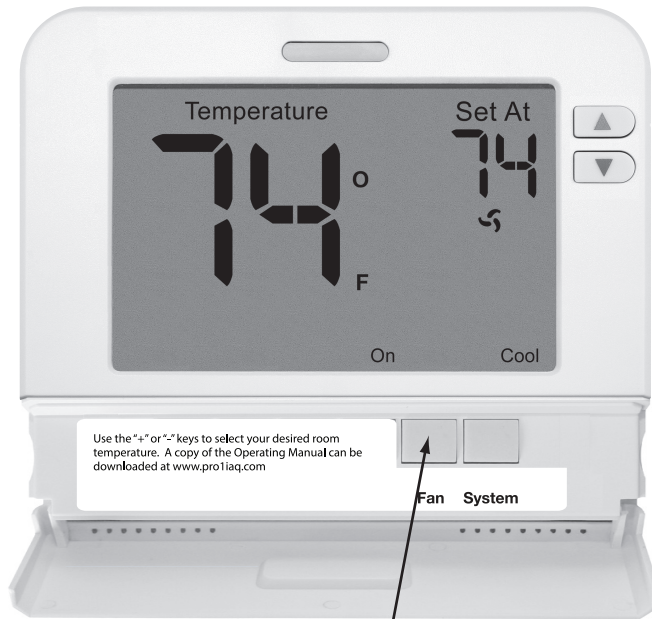

Hold down for 3 seconds,  
to reset filter reminder.

## Warranty Registration:

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

① Go to our website, and fill out a short registration form online.

- or -

② Complete the form below and mail it to the address shown.



## Warranty Registration:

**Name:** \_\_\_\_\_

**Address:** \_\_\_\_\_  
\_\_\_\_\_

**City:** \_\_\_\_\_

**State:** \_\_\_\_\_

**Zip:** \_\_\_\_\_

**Thermostat Model:** \_\_\_\_\_

**Date Installed:** \_\_\_\_\_

**Complete form and mail to:**

**Thermostat Warranty Registration**

1111 S. Glenstone  
Suite 2-100  
Springfield, MO 65804