




## TP-P-705

### VIVE Comfort

1111 S. Glenstone Ave., Suite 2-100  
Springfield, MO 65804

Toll-Free: 1-800-776-1635 Web: [www.vivecomfort.com](http://www.vivecomfort.com)  
Hours of Operation: M-F 9AM - 6PM Eastern

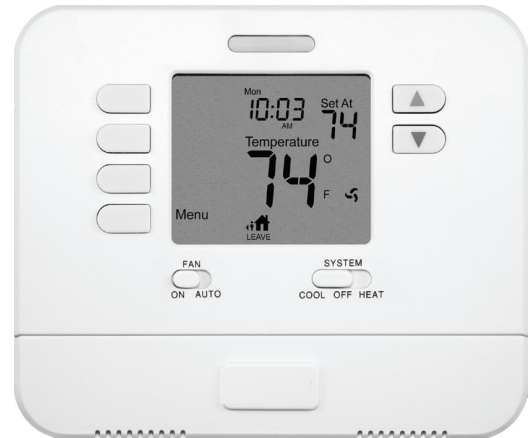

### Table of Contents

### Page

Thermostat Quick Reference	2
Thermostat Operation	3
Programming	4
Warranty Registration	6



#### Caution:


#### Equipment damage hazard

Do not operate the cooling system if the outdoor temperature is below 50°F (10°C) to prevent possible compressor damage.

Una versión en español de este manual se puede descargar en la página web de la compañía.

# OPERATING MANUAL THERMOSTAT QUICK REFERENCE

## Getting to know your thermostat

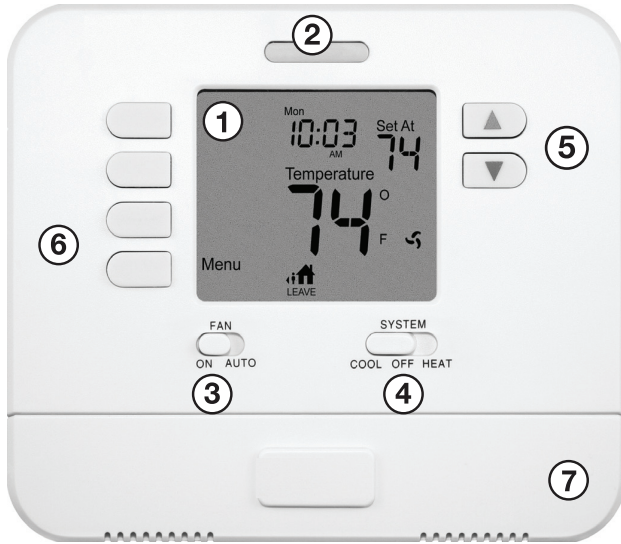

### ① LCD

Displays the user selectable setpoint temperature.

Days of the week and time

**Hold** is displayed when thermostat program is permanently overridden.

**System operation indicators:** The **COOL**, **HEAT** or **FAN** icon will display when the **COOL**, **HEAT** or **FAN** is on. **NOTE:** The compressor delay feature is active if these icons are flashing. The compressor will not turn on until the 5 minute delay has elapsed.

Indicates the current room temperature.

**Programmable Time Period Icons:** This thermostat has 4 programmable time periods per day.

**Low Battery Indicator:** Replace batteries when indicator is shown.


- ① LCD Display (pictured to the right)
- ② Glow in the Dark Light Button
- ③ Fan Switch
- ④ System Switch
- ⑤ Setpoint Buttons
- ⑥ User Buttons
- ⑦ Easy Change Battery Door



### Important


The low battery indicator is displayed when the AA battery power is low. If the user fails to replace the battery within 21 days, the screen will only show the low battery indicator but maintain all functionality. If the user fails to replace the batteries after an additional 21 days (days 22-42 since first "low battery" display) the set points will change to 55°F (Heating) and 85°F (Cooling). If the user adjusts these setpoints away from these it will hold for 4 hours then return to either 55°F or 85°F. After day 42 the batteries must be replaced immediately to avoid freezing or overheating because the thermostat will shut the unit off until the battery is changed.

## Battery door information

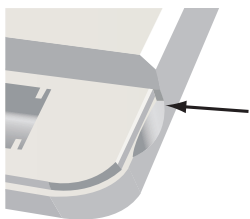


Use the finger bevel on the lower portion of the side of the thermostat to open the easy access battery door.

Insert 2 AA Alkaline batteries (included). High quality alkaline batteries are recommended.

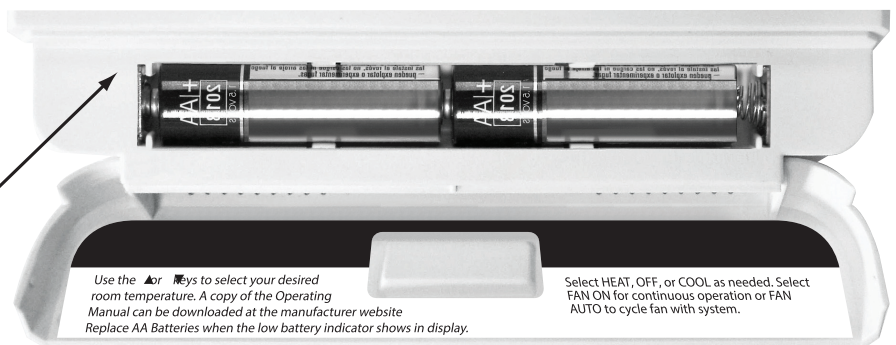


Simple operating instructions are found on the back of the battery door.

## Easy to use controls

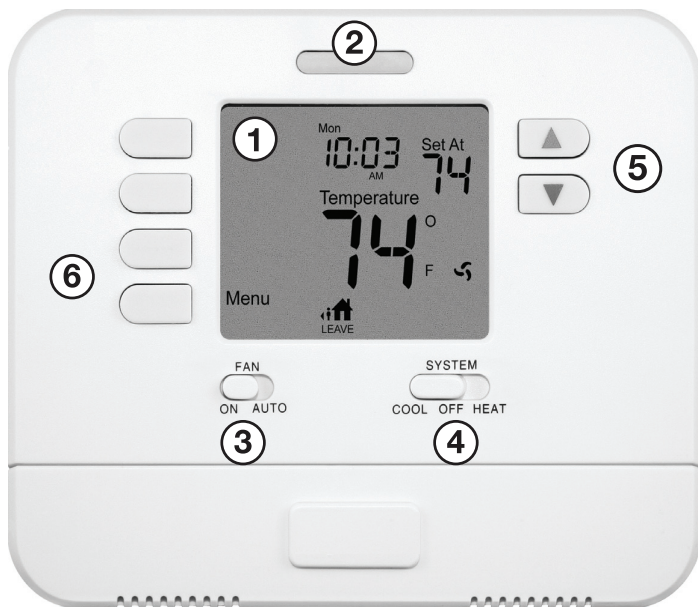

### Caution:

When the battery icon  appears replace your AA batteries immediately. Failure to do so may result in your heating & cooling system becoming inoperable.

### ① LCD Display:

See page 2 for details about this display read out and icons.

### ② Glow in the Dark Light Button:

The glow in the dark light button will self illuminate for several hours after exposure to ambient light. This button turns on the display light when pressed.

### ③ Fan Switch:

Select **ON** or **AUTO**. **ON** will run the fan continuously. **AUTO** will cycle the fan on only when the heating or cooling system is on.

### ④ System Switch:

Selects the operation mode of your HVAC system. Selecting **HEAT** turns on the heat mode. Selecting **COOL** turns on the air conditioning mode. Selecting **OFF** turns both heating and cooling off.

### ⑤ Temperature Setpoint Buttons:

Press the ▲ or ▼ buttons to select the desired room temperature.







### ⑥ User Buttons:

Use these buttons to set up your programming options. Refer to the next page for instructions.

## Set Time

---

Follow the steps below to set the current time:

1. Press **MENU**
2. Press **SET TIME**
3. Day of the week will be flashing.  
Use the  or  key to select the current day of the week.
4. Press **NEXT STEP**
5. The current hour is flashing.  
Use the  or  key to select the current hour. When using 12-hour time, make sure the correct a.m. or p.m. choice is selected.
6. Press **NEXT STEP**
7. Minutes are now flashing.  
Use the  or  key to select current minutes.
8. Press **DONE** when completed



### Important:

You will see a **TECH SET** option after the **MENU** key is pressed.





This **TECH SET** key is for installer configuration and should **NOT** be changed unless you consult your Professional Heating and Air Conditioning Technician.

## Set Program Schedule

---

To customize your program schedule, follow these steps

### Weekday:

1. Select **HEAT** or **COOL** from the system switch.  
**Note:** You have to program heat and cool each separately.
2. Press **MENU**
3. Press **SET SCHED** . Note: Monday-Friday is displayed and the **WAKE** icon is shown. You are now programming the wake time period for the weekday setting.
4. Time is flashing. Use the  or  key to make your time selection for the weekday **WAKE** time period.
5. Press **NEXT STEP**
6. The setpoint temperature is flashing. Use the  or  key to make your setpoint selection for the weekday wake period.
7. Press **NEXT STEP**
8. Repeat steps 4 through 7 for weekday **LEAVE** time period, for weekday **RETURN** time period, and for weekday **SLEEP** time period.

### Saturday:

9. Repeat steps 4 through 7 for Saturday **WAKE** time period, for Saturday **LEAVE** time period, for Saturday **RETURN** time period, and for Saturday **SLEEP** time period.

### Sunday:


10. Repeat steps 4 through 7 for Sunday **WAKE** time period, for Sunday **LEAVE** time period, for Sunday **RETURN** time period, and for Sunday **SLEEP** time period.

## Filter Change Reminder



If your installing contractor has configured the thermostat to remind you when the air filter needs changed, you will see **FILT** in the display when your air filter needs changed. **FILT** will be shown in the display after your system has run long enough to require an air filter change.

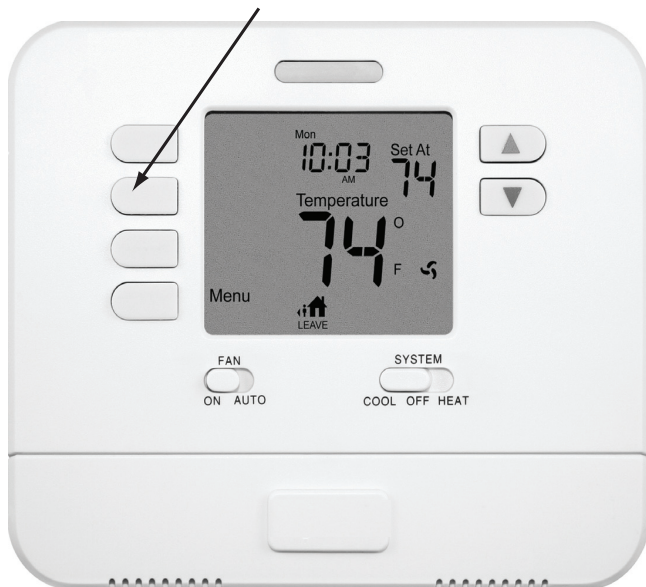

Resetting the filter change reminder: When **FILT** reminder is displayed, you should change your air filter and reset the reminder by holding down the second button from the top left side of the thermostat for 3 seconds.

Hold down for 3 seconds, to reset filter reminder.



## Temporary and Permanent Hold Feature

**Temporary hold:** The thermostat will display **HOLD** and **RUN SCHED** on the left of your screen when you press the  or  key. If you do nothing, the temperature will remain at this setpoint temporarily until the next program period begins. Your program setpoint will then replace your temporary setpoint.

**Permanent hold:** If you press **HOLD**, you will see **HOLD** appear below the setpoint temperature in the display. The thermostat will now permanently stay at this setpoint and can be adjusted using the  or  keys.

**To return to program:** Press **RUN SCHED** to exit either temporary or permanent hold.

**Warranty Registration:**

Your new thermostat has a 5 year limited warranty. You must register your warranty within 60 days of installation. You can register your new thermostat in 2 ways.

- ① Go to our website and fill out a short registration form online.
- or -
- ② Complete the form below and mail it to the address shown.



**Warranty Registration:**

**Name:** \_\_\_\_\_

**Address:** \_\_\_\_\_  
\_\_\_\_\_

**City:** \_\_\_\_\_

**State:** \_\_\_\_\_

**Zip:** \_\_\_\_\_

**Thermostat Model:** \_\_\_\_\_

**Date Installed:** \_\_\_\_\_

**Complete form and mail to:**

**Thermostat Warranty Registration**

1111 S. Glenstone  
Suite 2-100  
Springfield, MO 65804